



5330 East 25th Street
Indianapolis Indiana 46218
Phone: (888) 445-4142
www.tepid.com

Installation &
Maintenance Manual
Certified to ANSI Z358.1



Stingray Systems S2236 - Eyewash Cabinet Unit less mixing valve S2536 - Eye/Facewash Cabinet Unit less mixing valve

SUPPLIES REQUIRED (NOT INCLUDED)

- Cabinet mounting hardware - screws, washers, wall anchors (if not mounted to wall studs)
- Wall flange mounting hardware
- 1/2" PEX connection fitting (Sharkbite/push-to-connect)

* Refer to all local plumbing codes throughout installation to ensure compliance

* Refer to ADA & ANSI Z358.1 codes to ensure compliance


CAUTION: When installing/maintaining/adjusting the product, all fixtures should be isolated from use. Stingray Systems, Inc. recommends that you work safely at all times and in a manner consistent with the OSHA Lock/Tagout Standard, 29 CFR 1910.147 and other applicable standards.

GUARANTEE


We guarantee the Stingray Systems product to be free from defects in workmanship and material, and for a period of eighteen (18) months from date of shipment from the factory or one (1) year from date of installation, whichever occurs first, will replace any parts found by us to be defective. We will not be held responsible, however, for any labor incidental to, or for any damages caused by defective material.

With any questions, please do not hesitate in contacting us at: **1-888-445-4142** or via email at **info@tepid.com**.


WALL MOUNTED

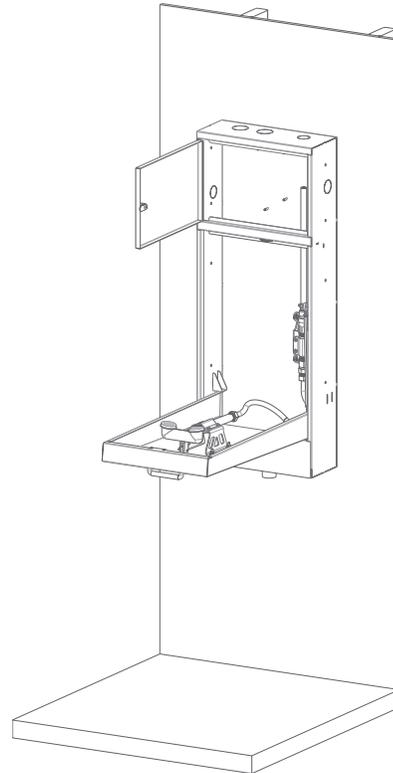


RECESSED MOUNTED

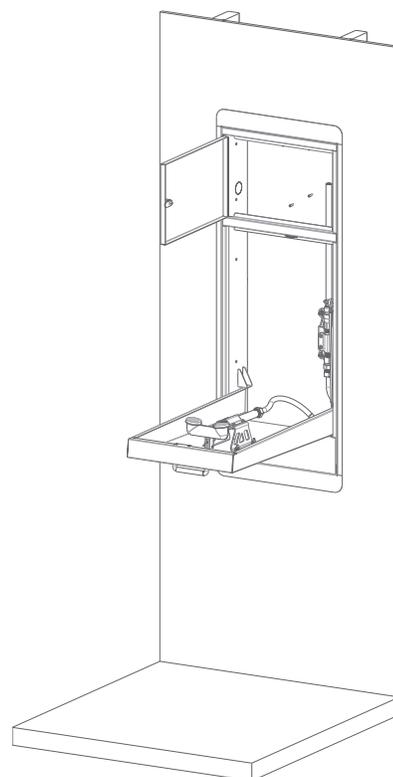

STEPS

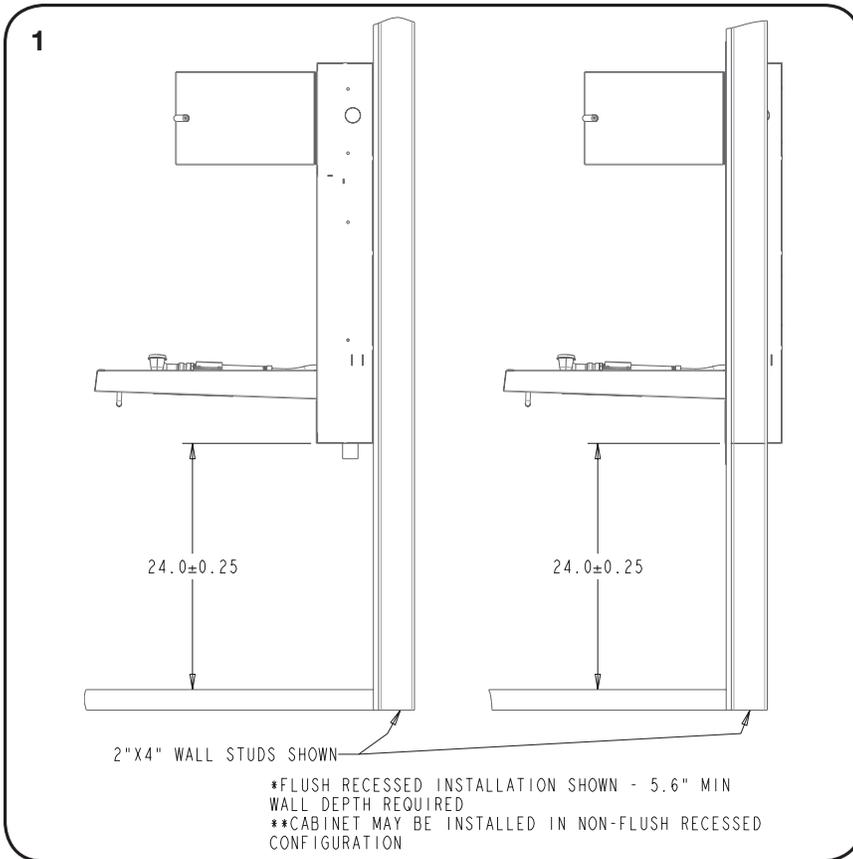


1. Eye/Face Wash Cabinet to be mounted 24" ± 0.25" above floor - measure & mark wall accordingly

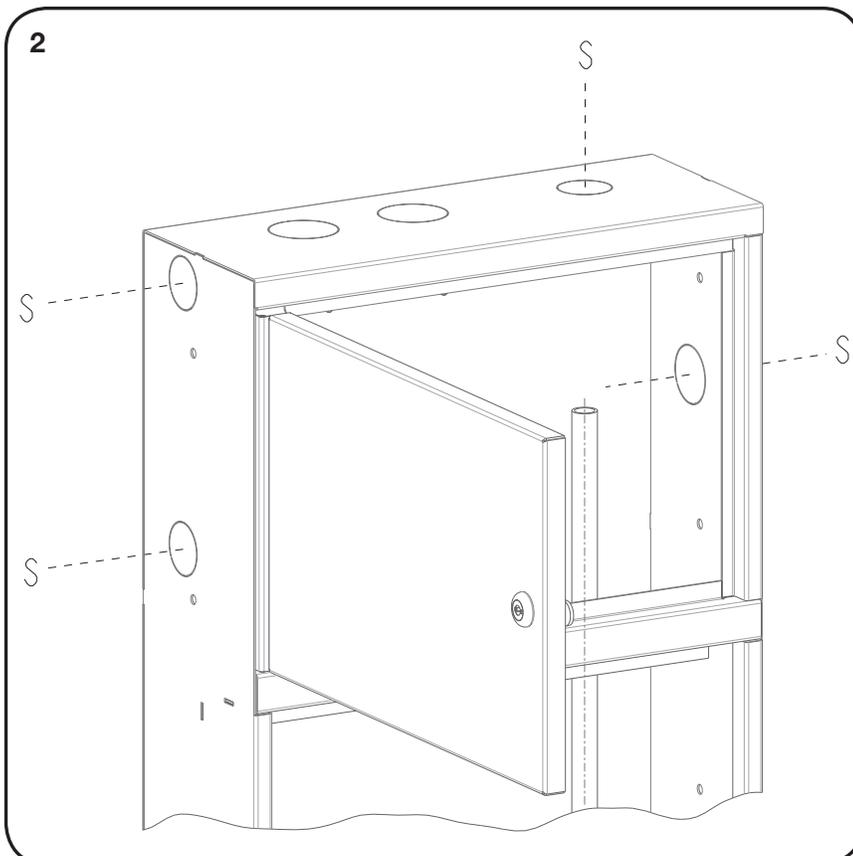


2. Supply line to unit can be routed from the top, left, or right of cabinet - remove the cabinet knockout for the desired routing
NOTE: Provisions may be required for left & right routed supply lines in recessed mounted cabinets

STEPS

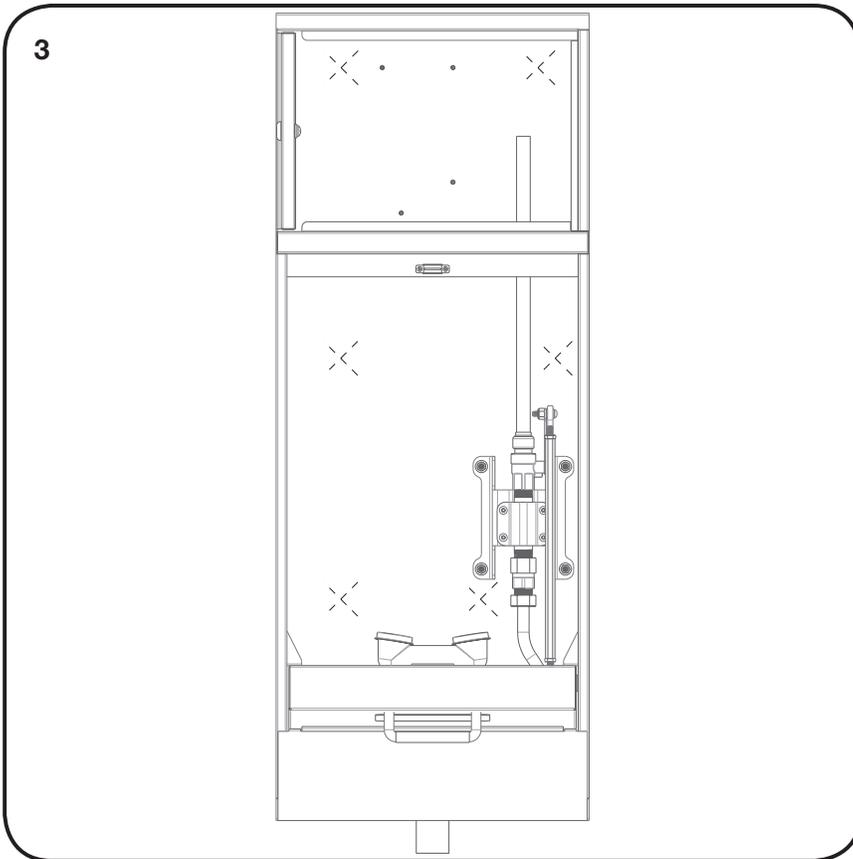


3. Wall mounted (if recess mounting, skip to Step #5) Drill holes through back of cabinet where required for mounting (Cabinet to be 24.0" \pm .25" above floor)
NOTE: It is recommended to mount cabinet directly to wall studs and/or blocking
4. Mount Eye/Face Wash Cabinet to wall using installer supplied hardware (Cabinet to be 24.0" \pm .25" above floor)

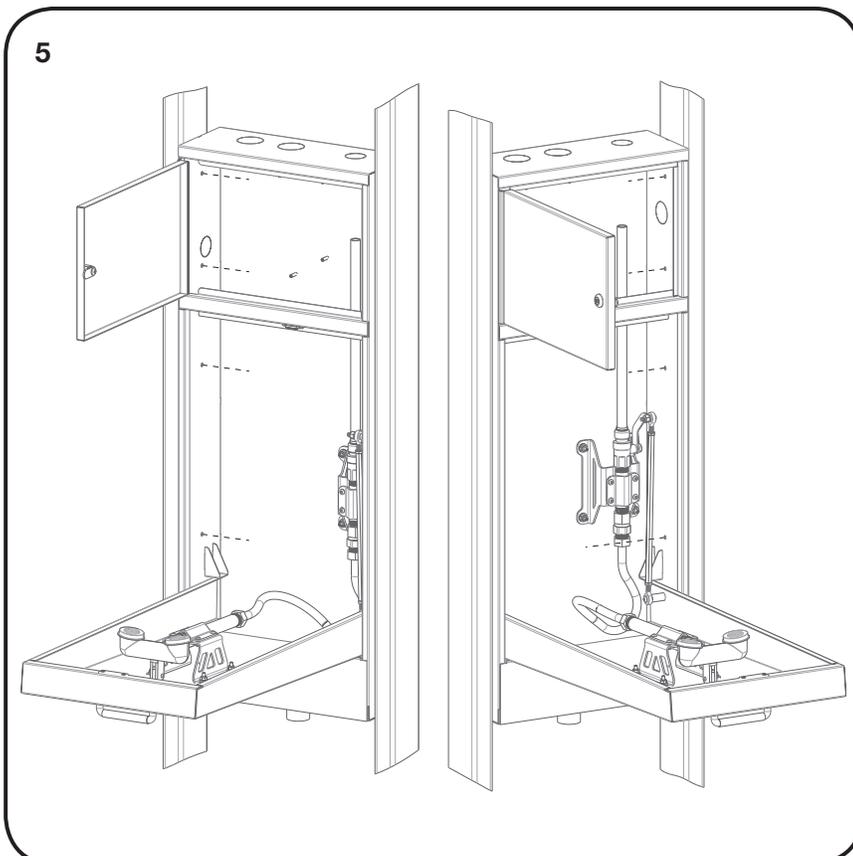


5. Recessed Mounted
NOTE: Eye/Face Wash Cabinet is sized to mount between 16" centered 2-by wall studs
Determine desired recess depth. Mount cabinet between studs (24.0" \pm .25" above floor) using the 4, 0.25" mounting holes on each side of cabinet with installer supplied hardware
NOTE: Accommodate for wall board thickness when choosing recess depth
NOTE: Mounting holes can be enlarged if required

STEPS

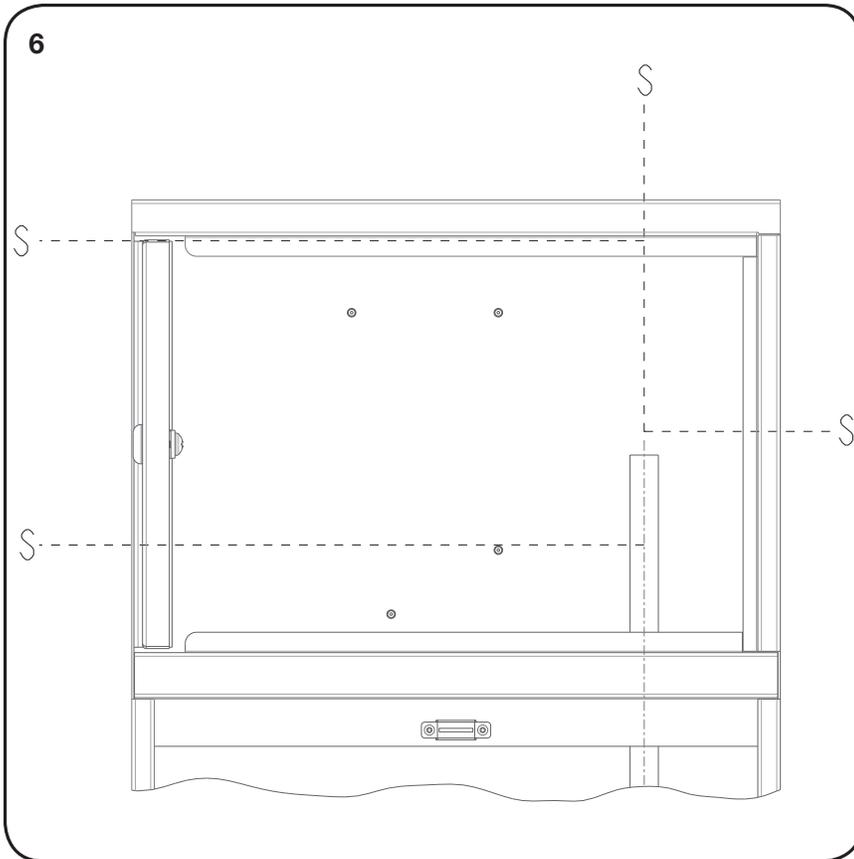


6. Connect supply line, through chosen knockout, to 1/2" PEX line of unit
NOTE: 1/2" PEX connection supplied by installer

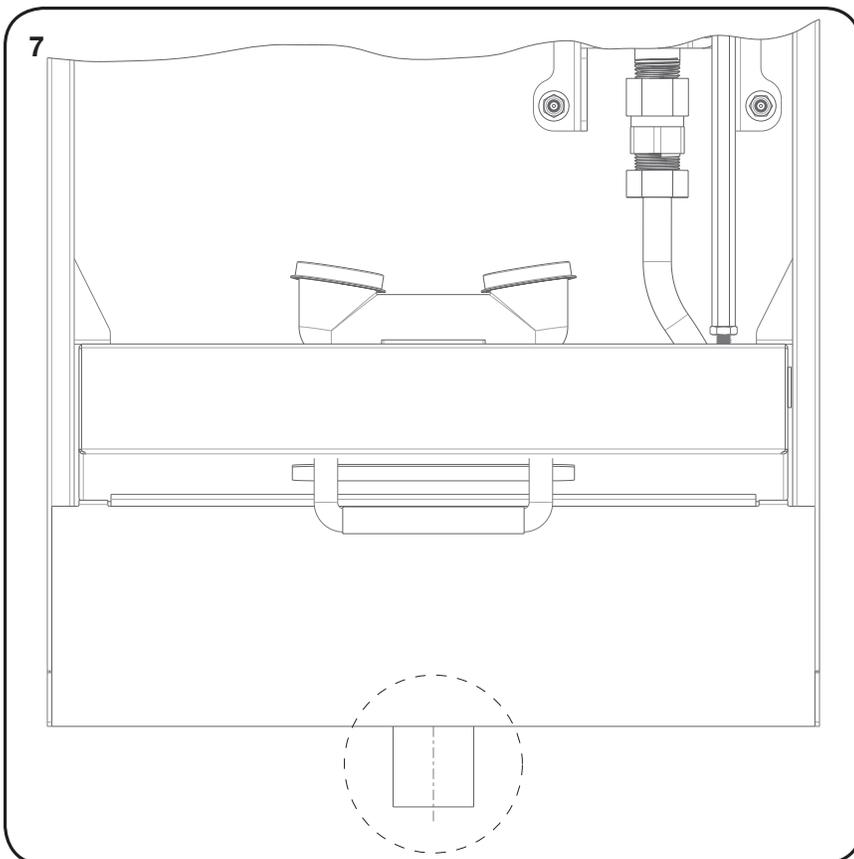


7. Connect drain line to cabinet drain spout

STEPS

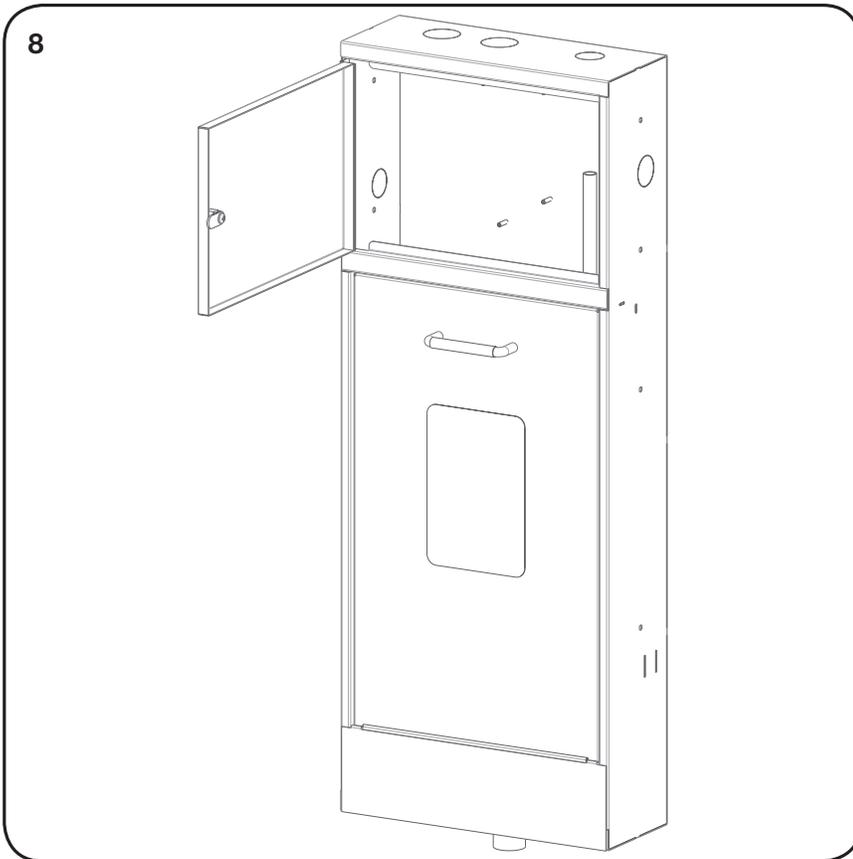


8. Close Eye/Face Wash activation (lower) door. Open supply line & check unit for leaks.

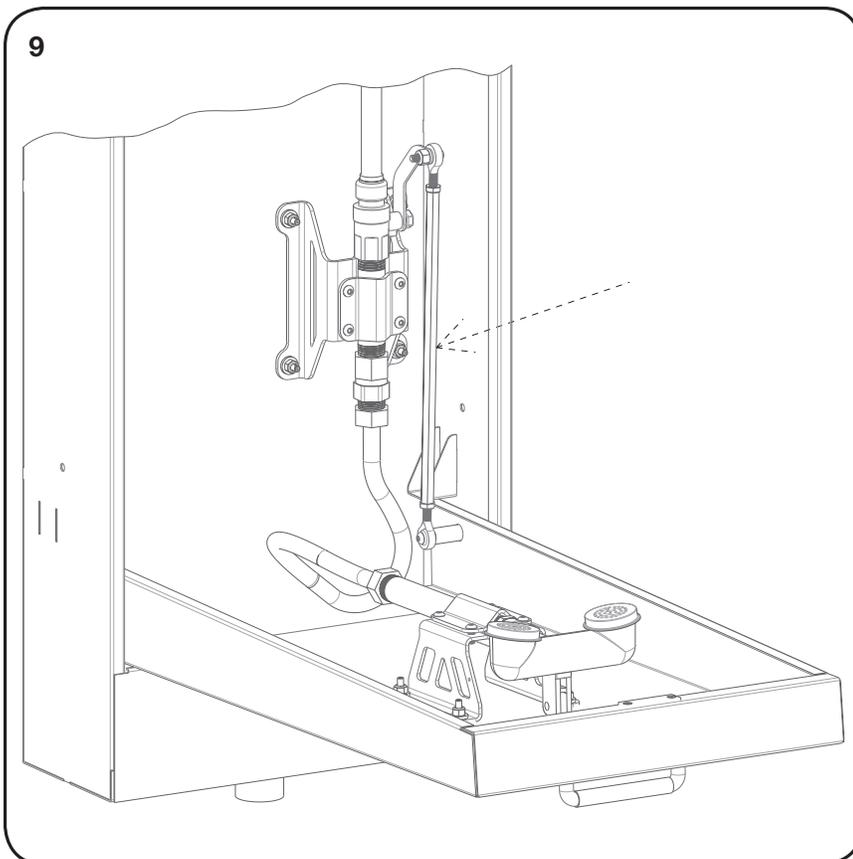

9. Open Eye/Face Wash activation (lower) door & verify adequate flow & drainage through Eye/Face Wash block. (Refer to ANSI Z358.1 Standard) Close Eye/Face Wash activation (lower) door & verify no flow through Eye/Face Wash block. Adjust turnbuckle length as needed to achieve both open & closed conditions.
REQUIRED: 7/16" wrench & 3/8" wrench
NOTE: Close supply line to unit for turnbuckle adjustments

STEPS

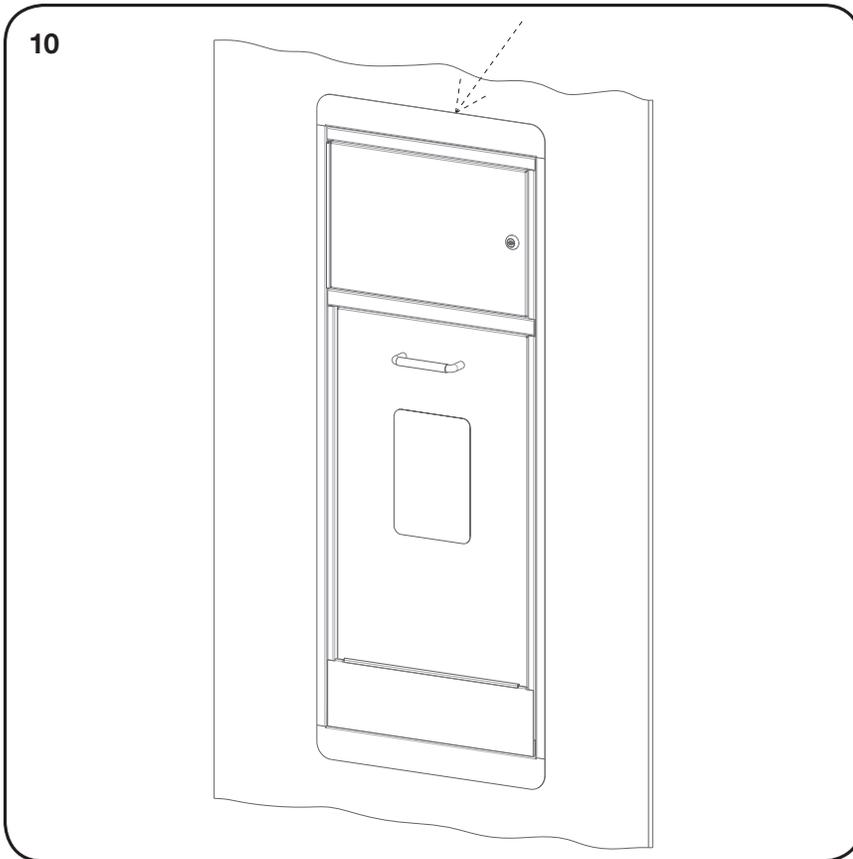

10. Recessed Mounted
Close cabinet doors. Install wall flange over cabinet & affix to wall using installer supplied materials.